



Toshiba Satellite L655D-S5095 Touchpad Button Replacement

Replacing the touchpad button is an intermediate level repair. Carefully follow the instructions and keep an eye out for placement of important connections stressed in the photos.

Written By: Alejandro





TOOLS:

- [Tweezers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Locate the battery locks on the bottom of the laptop.
- Slide the right lock outwards, until it locks into place.
- Slide and hold the left lock outwards and hold it in place.

Step 2



- While holding the lock in place, slide the battery out towards you.

Step 3 — Touchpad Button



- Place device down so the bottom of it is facing you.
- Unscrew each screw located in the deep holes found around the bottom of the device as shown.

Step 4



- Unscrew the panel located over the RAM as shown
- Rotate the computer so the battery is now located on the top of the device. Now unscrew the single screw located at the top left of the RAM's housing as shown

Step 5




- Remove the battery.
- Unscrew the single screw closest to the center of the device, as shown in picture two.
- Remove the four screws that were previously hidden by the battery.

Step 6



- Remove the disk drive located at the left of the device.
- Remove two screws that were hidden by the disk drive, as shown in picture two.

Step 7

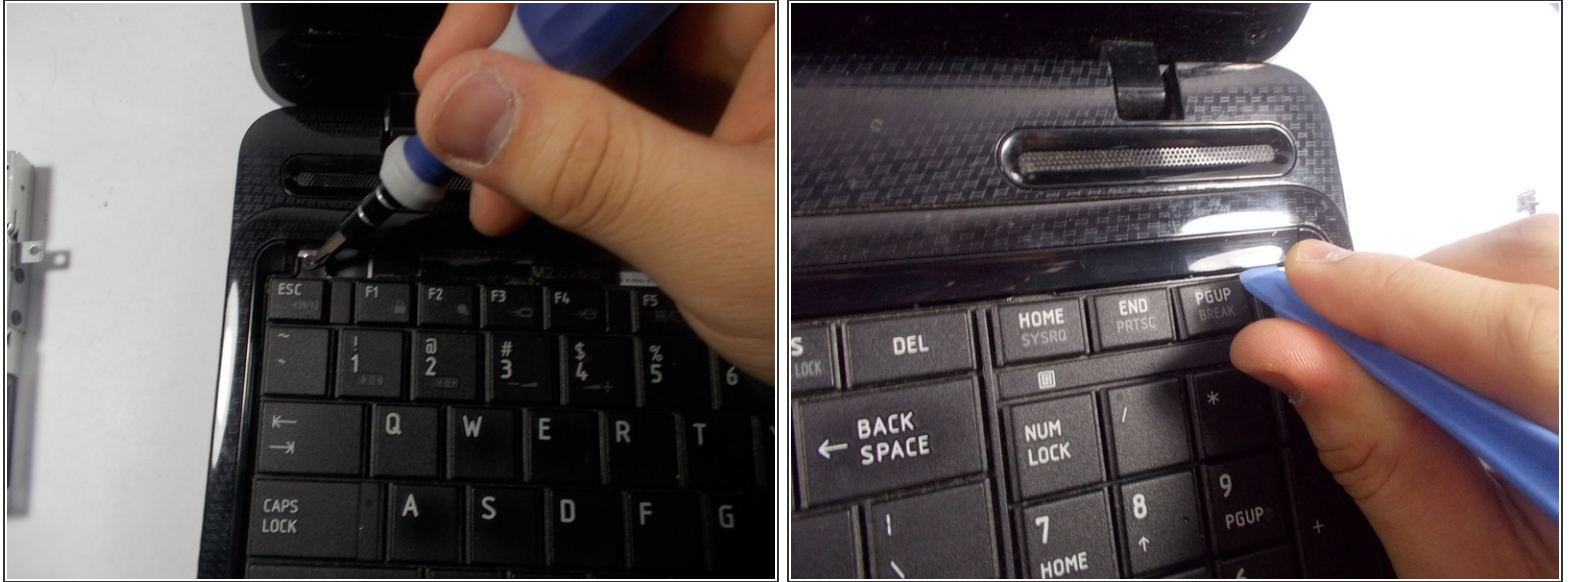

- Now turn the device over so you can see the keyboard. Find the plastic bar located at the top of the keyboard.
- Pry this plastic cover off with the use of the plastic opening tools.
- Now unscrew the screws that are located under the plastic cover previously removed. After these are gone, remove the keyboard.

Step 8




- Remove the screws located around the area the keyboard had previously covered, as shown in the red circles.
- Before removing this cover, locate the connection indicated in the photo and disconnect it.
- Remove the cover.

Step 9






- remove all screws on bottom marked F65

Step 10

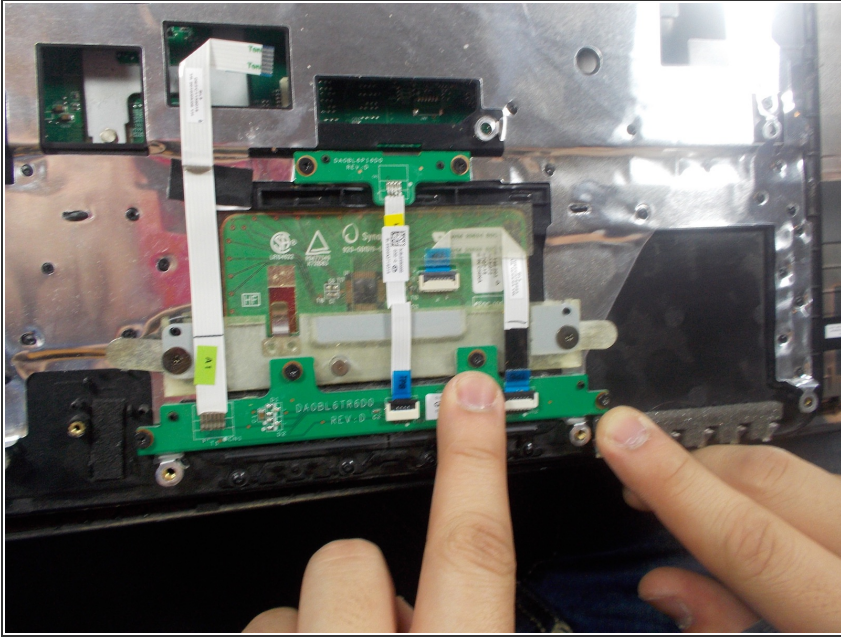

- Turn the cover over and remove the back panel.
- Locate the button found at the lower end of the cover. Once found, remove the four screws keeping it in place.

Step 11

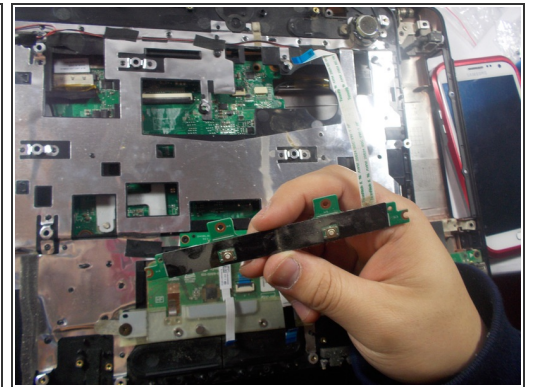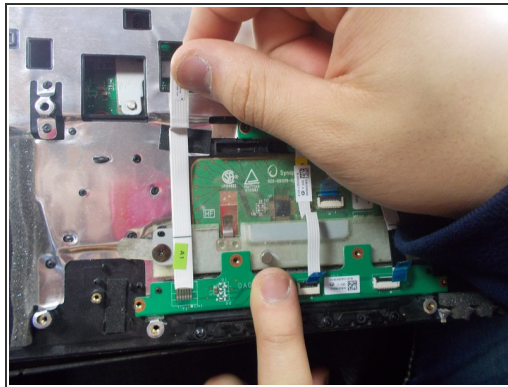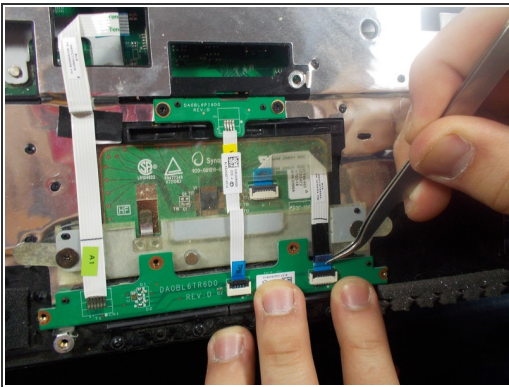

- Remove the two buses from the button by the blue tab as shown in the pictures.
- Remove the last bus from the motherboard by pulling the blue tab.
- Remove the disfunctional button from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 02:47:31 PM.